



**2012 SKI MOUNTING SPECS**


**FREERIDE SERIES**

Model	Size (cm)	Alpine Mid Boot (mm)
Gigawatt	195	874
	185	829
Megawatt	188	823
	178	779
AMPerage/ Element	185	849
	175	803
	165	757
Zealot	192	864
	182	835
Verdict	190	836
	180	792
	170	748
Warrant/ Ember	188	817
	178	774
	168	730
	158	687

**TOURING SERIES**

Model	Size (cm)	Alpine Mid Boot (mm)
Carbon Megawatt	188	790
	178	748
Justice	185	850
	175	776
Drift/Starlet	186	817
	176	773
	166	729
	156	685
Revert	189	846
	181	810
	173	774
	165	738
Aspect/ Crescent	186	806
	176	762
	166	718
	156	675
Current	185	818
	176	778
	167	738
	158	698
Stigma	176	737
	168	703
	160	669

MEASUREMENTS TAKEN FROM TAIL, IN MILLIMETERS

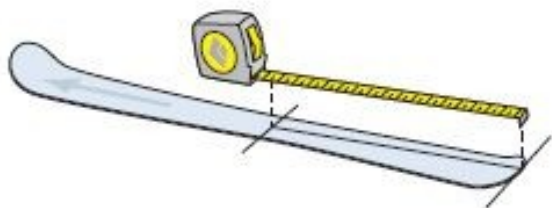



## TELEMARK BINDING MOUNTING SPECS

CHOOSE YOUR SKI STYLE (CLASSIC OR PROGRESSIVE) , AND USE THIS CHART TO LOCATE THE TELEMARK PIN LINE THE SPECIFIED DISTANCE IN FRONT OF THE ALPINE MID BOOT MARK ON THE SKI.

BOOT MONDO SIZE	BLACK DIAMOND TELE BOOT SOLE LENGTH (mm)	CLASSIC MOUNT BOOT CENTER 25mm BACK OF ALPINE LOCATION	PROGRESSIVE MOUNT BOOT CENTER @ ALPINE MARK
		ALPINE MID SOLE MARK TO PIN LINE MEASUREMENT (mm)	
23	269	103	128
24	280	108	133
25	294	115	140
26	305	121	146
27	315	126	151
28	325	131	156
29	335	136	161
30	346	141	166

**CLASSIC** = TRADITIONAL SKI SHAPES AND SIDECUTS PAIRED WITH SOFTER 2 & 3 BUCKLE BOOT DESIGNS.

**PROGRESSIVE** = MODERN, TWIN ROCKERED SKIS PAIRED WITH TODAY'S STIFFER 3 & 4 BUCKLE FREERIDE TELEMARK BOOTS.

---

### FINDING BOOT CENTER FOR BOOTS WITHOUT A CENTER MARK

(PIN LINE IS LOCATED 14mm BEHIND FRONT OF DUCKBILL)

- 1) MAKE A MARK 14MM BEHIND THE TIP OF THE DUCKBILL ON THE OUTSOLE OF THE BOOT.
- 2) MEASURE FROM THIS LINE TO THE BACK OF THE HEEL AND DIVIDE BY 2
- 3) THIS IS YOUR PIN LINE TO TELE MID-BOOT MEASUREMENT. WRITE IT DOWN!

**PROGRESSIVE MOUNT** = LOCATE THE MOUNTING TEMPLATE SO THAT THE PIN LINE IS POSITIONED THIS SAME DISTANCE IN FRONT OF THE ALPINE BOOT CENTER MARK ON THE SKI. TELE MID BOOT MARK WILL ALIGN WITH THE ALPINE MID BOOT MARK.

**CLASSIC MOUNT** = *SUBTRACT 25mm FROM THIS MEASUREMENT, AND LOCATE THE MOUNTING TEMPLATE SO THAT THE PIN LINE IS POSITIONED THIS DISTANCE IN FRONT OF THE ALPINE BOOT CENTER MARK ON THE SKI. TELE MID BOOT MARK WILL ALIGN 25MM BEHIND THE ALPINE MID BOOT MARK.*