




# SKI MOUNTING SPECS

Measurements taken from tail, in millimeters:

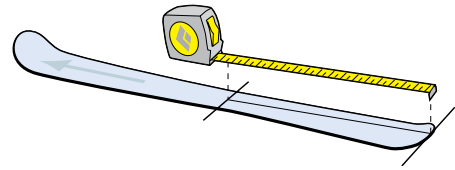

MODEL	SIZE	TELE: PIN LINE (mm)			ALPINE: MID-BOOT (mm)
		25.5 and smaller boot	26.0 to 27.5 boot	28.0 and larger boot	All Boot Sizes
MEGAWATT	188	935	940	945	790
	178	885	890	895	748
JUSTICE	185	945	950	955	820
	175	898	903	908	776
ZEALOT	192	960	965	970	832
	182	905	910	915	796
VERDICT	190	974	979	984	854
	180	917	922	927	802
	170	864	869	874	762
KILOWATT	185	943	948	953	807
	175	887	892	897	762
	165	834	839	844	713
	155	781	786	791	667
HAVOC	185	951	956	961	845
	175	885	890	895	773
	165	835	840	845	720
JOULE	175	887	892	897	762
	165	834	839	844	713
	155	781	786	791	667
VELVET	175	885	890	895	773
	165	835	840	845	720
VOODOO	185	948	953	958	835
	175	885	890	895	763
	165	835	840	845	710
STIGMA	182	925	930	935	827
	174	882	887	892	768
	166	835	840	845	746
	158	790	795	800	704
GURU	178	901	906	911	797
	170	860	865	870	756
	162	819	824	829	713
CULT	177	897	902	907	785
	167	836	841	846	726
	157	784	789	794	678

Use 3.6 Ø x 9.5 mm drill bit, but also cross-reference with binding manufacturer's screw recommendation, if any. We recommend using white wood glue as a sealant. For tele, if concerned about screws loosening, we recommend 1-hour epoxy.